

## USER'S MANUAL FOR "ME" SERIES HOTEL SAFE

1. Double codes system: personal code (4 digits), master code (6 digits). Factory settings: personal code: "1234"; master code: "888888".
2. Opening  
First opening: install 4 AA batteries into the external battery case, plug in the outlet on the faceplate, input factory setting personal code or master code. when pressing the button there will be a "beep". The LED display will show "open" when the code is correct, otherwise, it will show "E-code". After opening. it will show "opened" for 4 seconds.  
Remove the batteries from the external battery case to the battery case on the back of the door, you can use the safe without the external power supply now.
3. Close the door:
  - Close the door and press "LOCK" within 10 minutes after having opened the door. The personal code will blink and the door will be locked. You can use the same personal code as last time.
  - If the door has been opened for more than 10 minutes, it is necessary to input the personal code (4-digits) before pressing "Lock". If the door is correctly closed the display will show: "CLOSED" and then will show the personal code.
4. Code setting
  - Change master code: under opening position input original manage code and press "lock", when the displayer shows "NEW", you can input a new master code; then press "lock"; after it shows "AGAIN", input the new master code one more time and press "lock" again, if it succeed the displayer will show "DONE" to indicate than the master code has been chnnged.
  - Change personal code: input 4 digit personal code before closing the door, press "lock", the displayer will show "CLOSED", and the personal code will blink for one time.
5. Emergency opening: In case the personal code is lost or forgotten, you can use emergency key or use the master code to open the door.
6. Code hidden function: press "reset" two times, then press "lock", it will come into hidden function, when you input the codes, it only show "€" on the display.
7. Cautions:
  - Digiting the wrong code 3 times will cause the safe to go in safe mode for 15 minutes. During this period it's not possible to open the safe and the display will show "Hold+digit". After 15 minutes, it will recover to normal situation.
  - Low voltage: when the AA batteries voltage decrease of 5V, the display it will show "LO-BAT".
  - "reset" is also a deleting key. By pressing it one time, it will delete the last digit.